


Confidential

TECHNICAL SERVICE BULLETIN

NO.

2 A 41

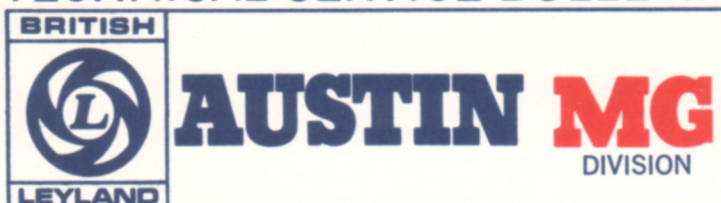

DATE: 8/20/69

BRITISH LEYLAND MOTORS INC.
600 Willow Tree Road • Leonia • New Jersey 07605

SUBJECT:

MODELS:

Engine and transmission Oil Level

Austin America Automatics

Instances of complete loss of drive or apparent transmission slip, particularly when starting from cold, have been due to low oil levels.

Vehicles driven with low oil levels are liable to promote severe oil aeration resulting in a false reading being apparent on the dipstick and damage to the transmission.

The method of checking oil levels during servicing is as detailed below and must be adhered to:-

- (1) Start engine and run for one to two minutes.
- (2) Switch off ignition and wait for one minute, then check the level and top up if necessary to the 'MAX' mark on the dipstick.