

LUCAS WORKSHOP INSTRUCTIONS**DISTRIBUTOR MODEL DM6****LUBRICATION OF REPLACEMENT UNITS**

To ensure effective lubrication of the shank bearing it is important to carry out the following instructions before fitting a replacement unit to the vehicle.

- (i) Screw the distributor shaft lubricator clockwise one complete turn.
- (ii) Inject a quantity of clean engine oil into the hole in the distributor shank.

N.B. Do not accelerate the engine immediately after the distributor has been fitted, but allow a low speed running-in period — preferably of 500 miles.

