

## DISTRIBUTOR TESTER ADAPTERS & ACCESSORIES (All Models)

| <u>Part Number</u> | <u>Description</u>   |
|--------------------|--|
| 1336               | One chuck wrench   |
| 2-1892             | Spring Tension Gauge. Capacity — 40 oz. Features a red "lazy hand" indicator to record maximum readings when testing breaker arm spring tension.   |
| 3127-2             | Adapter. Designed to drive distributors that have a centered or offset tang. It has a centered slot on one end and an offset slot on the opposite end. Usually engaged in the distributor tester with the centered slot down. When testing distributors with centered drive tangs, lower the shaft through the offset upper portion and engage the tang with the lower centered slot. (The upper portion of the adapter serves as a pilot bearing.) For use in testing many distributors of Chrysler products, Cadillac, Studebaker, International, White, Corvair, Foreign cars, etc. |
| 669-519            | Tubing, 3 pieces. For protection when testing distributors with nylon gears. Place one piece of tubing over each of the three jaws of the tester chuck.  |